


Resetting NetPort Serial Settings

1. Connect the NetPort to a PC using Serial and open the HyperTerminal application with settings 9600-8-N-1.

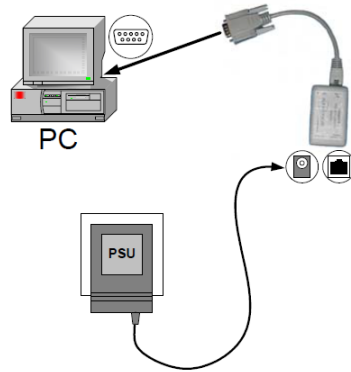

2. Once successfully connected, do a power cycle (unplug and then plug in the power connector) of the NetPort while the HyperTerminal connection is active. As soon as it is ON, press 'xxx' quickly within 3 seconds of connection. You will get the following dialog.

```
MAC address 00204A918B5A
Software version U6.5.0.3 (070403) XPTXEXE
AES library version 1.8.2.1
```

```
Change Setup:
0 Server
1 Channel 1
3 E-mail
5 Expert
6 Security
7 Defaults
8 Exit without save
9 Save and exit           Your choice ? _
```

3. Type 0 and press Enter which will take you to the Server options, as below. Type the IP Address as 000.000.000.000 to set it to the default DHCP option.

```
IP Address : (000) .(000) .(000) .(000)
Set Gateway IP Address (N)
Netmask: Number of Bits for Host Part (0=default) (0)
Change telnet config password (N)
```

4. Type 9 in 'Your choice' option to Save and Exit. On the next reboot, the device will log onto a DHCP obtained IP address.